





# Please read before use

## 1 Parts necessary for construction


① for straight pipe

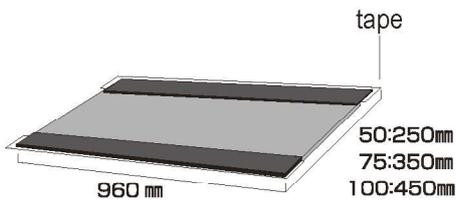

② for fittings

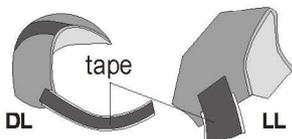


③ joint tape

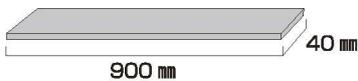

## 3 Attach straight pipe seat

- ① Cut the sheet for straight pipe with the required length.
- ② Make the sponge on the inside and adjust the mounting position.
- ③ Remove one side release paper and attach it to the pipe.  
Take off the other release paper and wind around so that it overlaps. [Indication of overlap allowance is listed in the table]

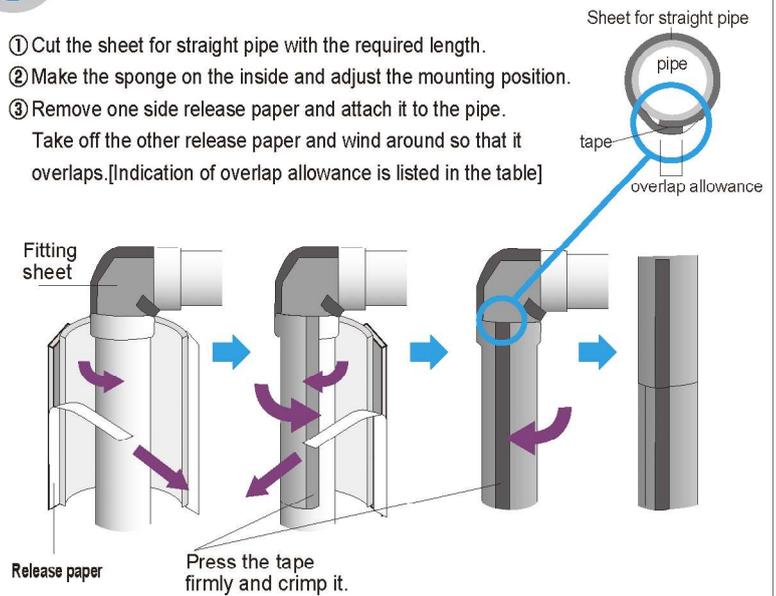


Size	Overlap allowance	
	Straight pipe	Joint of pipe and fitting
50	25mm	5mm
75	35mm	15mm
100	55mm	20mm


## 2 Attach fitting seat

Adjust the position so that the sponge is on the inside.  
Then fix it with tape


※ Joints and sockets for fittings,  
Cover with straight pipe sheet

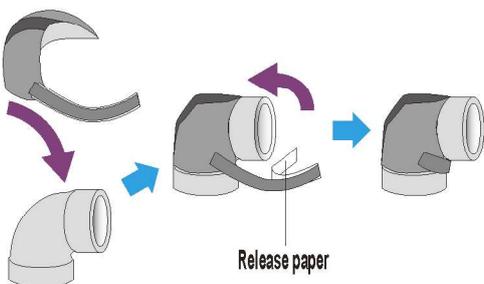

## 4 Attach joint tape

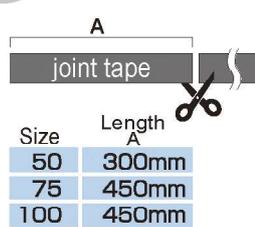

Size	Length A
50	300mm
75	450mm
100	450mm

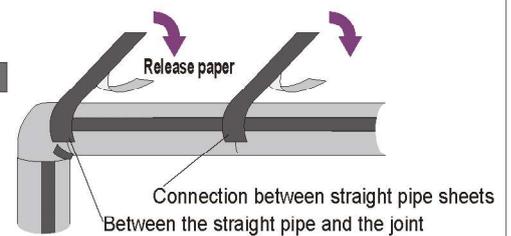

## 5 Attach support bracket

Using a dedicated support bracket to secure the pipe.

※ Looseness may occur when using general support fittings.  
In that case please wrap a joint tape under the band and adjust so that there is no looseness.

